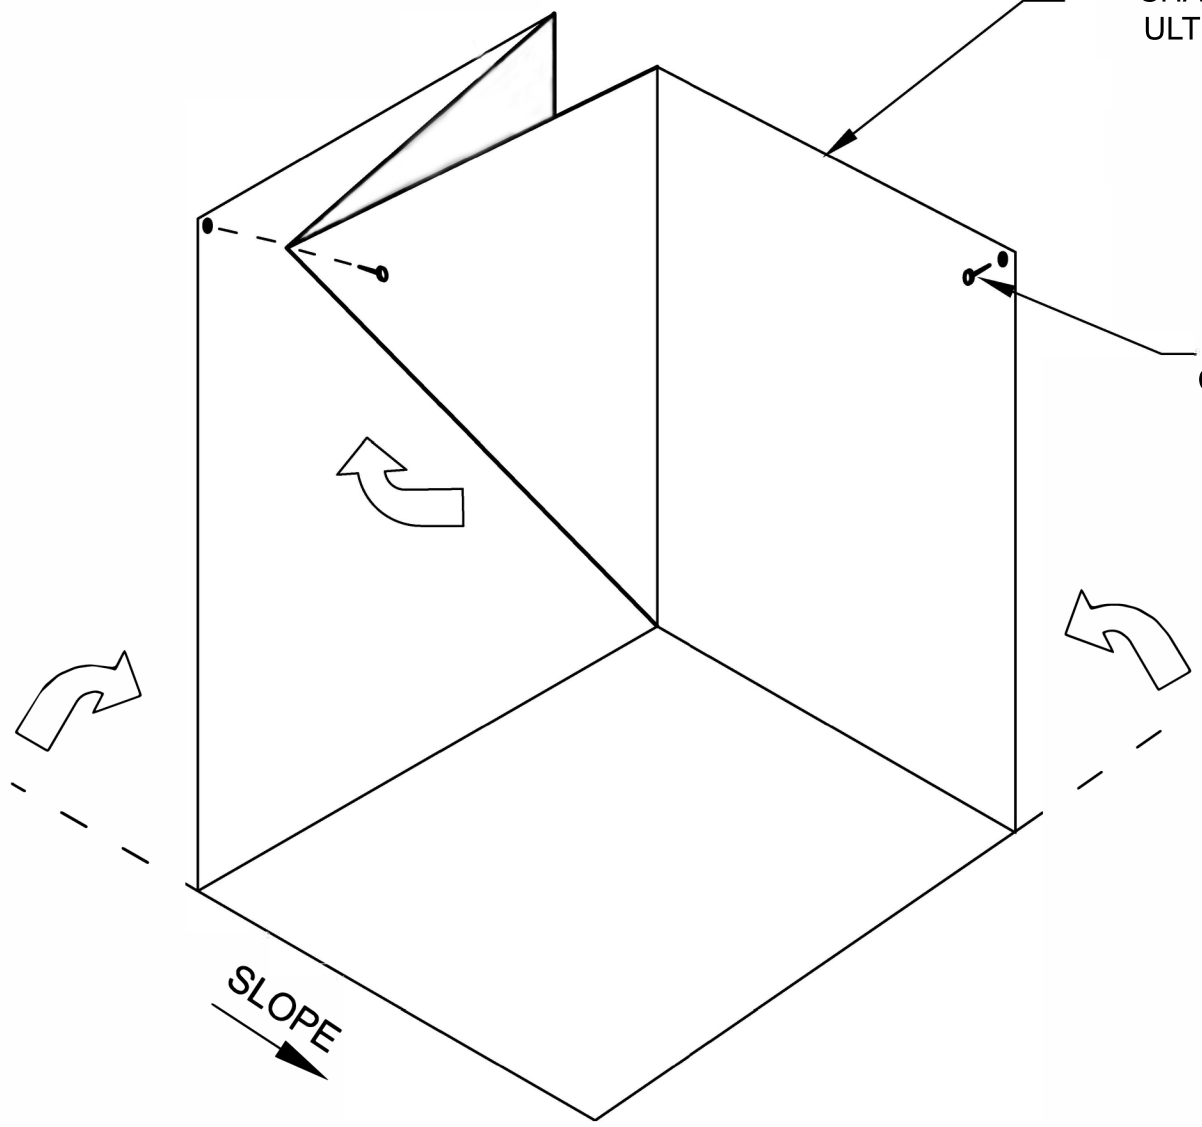

SHARKSKIN ULTRA SA®

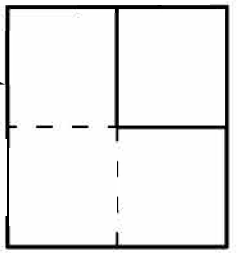

(BEFORE FOLDING, SCORE RELEASE PAPER TO EXPOSE ADHESIVE AS SHOWN)

MECHANICALLY FASTEN AS NECESSARY IN CORNERS THROUGH SHARKSKIN ULTRA SA®

NOTES:

A. VISIT WWW.SHARKSKINROOF.COM TO REVIEW THE COMPLETE LINE OF ROOF UNDERLAYMENTS, APPLICATIONS AND INSTALLATION INSTRUCTIONS

B. USE SQUARE PIECE OF MEMBRANE (12” X 12” MINIMUM) FOR INSIDE CORNER

C. FOLD AS SHOWN BY ARROWS

D. ANGLE OF CORNER MAY VARY, ADJUST FOLDING OF THE MEMBRANE ACCORDINGLY TO FIT TIGHTLY TO CORNER

E. INSTALL SHARKSKIN ULTRA SA TO FORM WATER SHEDDING LAPS

F. INSTALL FLASHING AND ROOFING PER MANUFACTURERS RECOMMENDATION

KIRSCH BUILDING PRODUCTS

INSIDE CORNER WALL TO DECK

SHARKSKIN ULTRA SA® - ALL WEATHER BARRIER

Drawing: SSUSA - 10
Scale: Not to Scale
Created: 02/24/2019
Supersedes: 07/23/2014